



B model – With Dump valve

Allows the high pressure side to be relieved. When port 'R' is pressurised and port 'IN' is open to tank. Pilot supply 3 will open the 'DV' valve allowing the fluid from the high pressure side 'H' to flow back to tank.

B-version:

